

Installation Instructions CQAC Surface Installation

Reference
J134b

To be read in conjunction with J061 CQAC Installation instructions

Remove from carton and remove all packing materials.


HEATER LOCATION

The CQAC-S Surface mounting box allows the CQAC Fan Forced Wall Heaters to be mounted where suitable fixings are available

The heater should be mounted vertically on the wall with the airflow down. To ensure proper air distribution a minimum spacing from heater to closest adjacent wall, floor or ceiling of 200mm must be observed.

SURFACE MOUNTING

- 1) Remove heater assembly from CQAC-R Recess box by removing 7 screws.
- 2) Securely fix recess box to wall via fixing holes in back.
- 3) Place surface box CQAC-S over recess box.
- 4) Use bottom knock out only for surface fixing. Pull through sufficient cable to make connections.
- 5) Make connections to terminal block and earth screw.
- 6) Install heater assembly into recess box and replace screws (7)
- 7) Fit grille to heater securing with screws (4) supplied
- 8) Fit frame to grille and secure with single screw in lower edge.

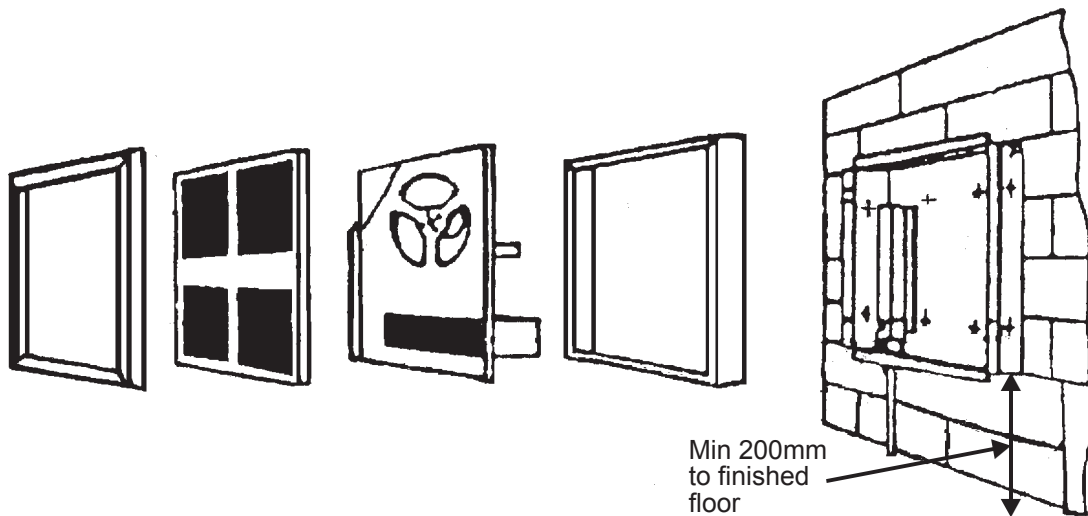

WARRANTY

This product is guaranteed, in accordance with our Conditions of Sale, for a period of 12 months from date of purchase. We will repair or replace, at our discretion, any part found to be defective. We cannot accept responsibility for any consequential liability.

The warranty will be invalid if the heater has not been installed in accordance with these instructions.

This does not affect your statutory rights.

Please keep these instructions for future reference.

The manufacturers reserve the right to change the specification at any time without prior notice E&OE

P01



Commercial Electric Heat Limited
Burnfoot Industrial Estate
HAWICK
Roxburghshire
TD9 8SL

Tel 01450 372103 Fax 01450 377800
Email sales@cehltd.co.uk Web www.cehltd.co.uk